

MEASURING GUIDE



ROMAN BLINDS INSIDE RECESS	01
ROMAN BLINDS OUTSIDE RECESS	02
MEASURING FLOOR LENGTH CURTAINS	03
MEASURING SHORT LENGTH CURTAINS	04

01

ROMAN BLINDS INSIDE RECESS

4 Measurements are needed as follows:

Measure from side to side at top of recess

Measure from side to side at bottom of recess



Measure from sill to top of recess on right hand side


Measure from sill to top of recess on left hand side

All measurements should be taken from inside back of recess

Decide which side you would like the controls on, left or right.

Please ring if you are unsure as to where to measure and I can advise you. ([Contact details found on last page](#))

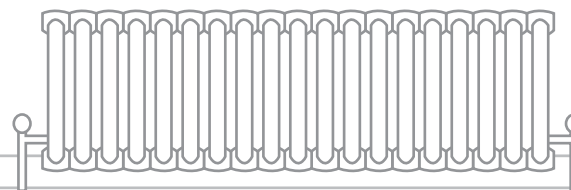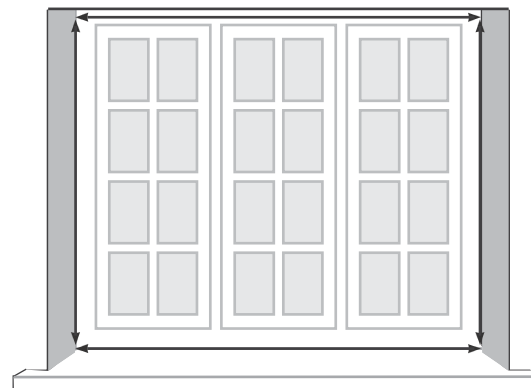

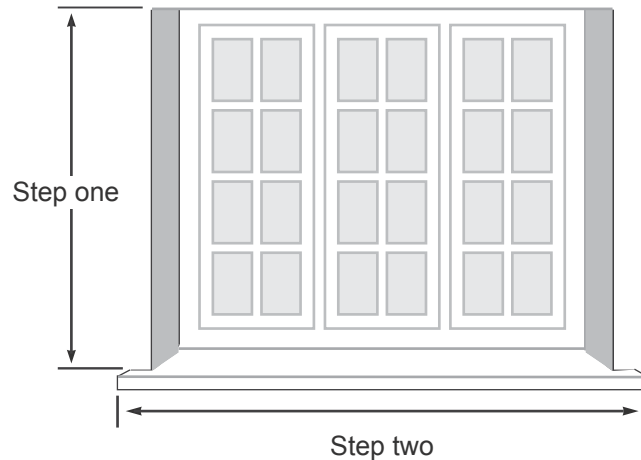

ROMAN BLINDS OUTSIDE RECESS


02

2 Measurements are needed as follows:

Step One - Measure from the sill to the top of window then add 6" (15cm)

Step two - Measure the sill width from side to side. (If you would like the width of the blind to be wider than the sill width or you do not have a sill please ring and I can advise you.)

Decide which side you would like the controls. Left or right hand side.

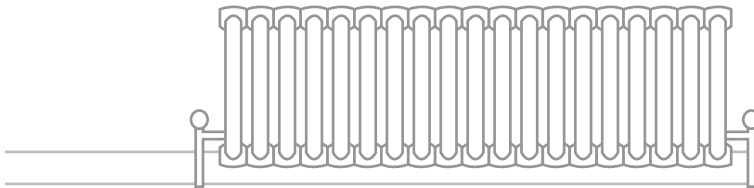

03

MEASURING FLOOR LENGTH CURTAINS

With pole or track in situ

4 measurements are needed as follows:

For a pole:


Step One: Measure the pole length excluding finials plus how many rings.



Step Two: Measure from the eye of ring (where curtain hook goes) to touching floor on the far left hand side, in the centre and on the far right hand side.

For a track:

Step One: Measure track length plus how many sliders (for curtain hooks)

Step Two: From the top of of the track measure to touching floor on the far left hand side, in the centre and on the far right hand side.

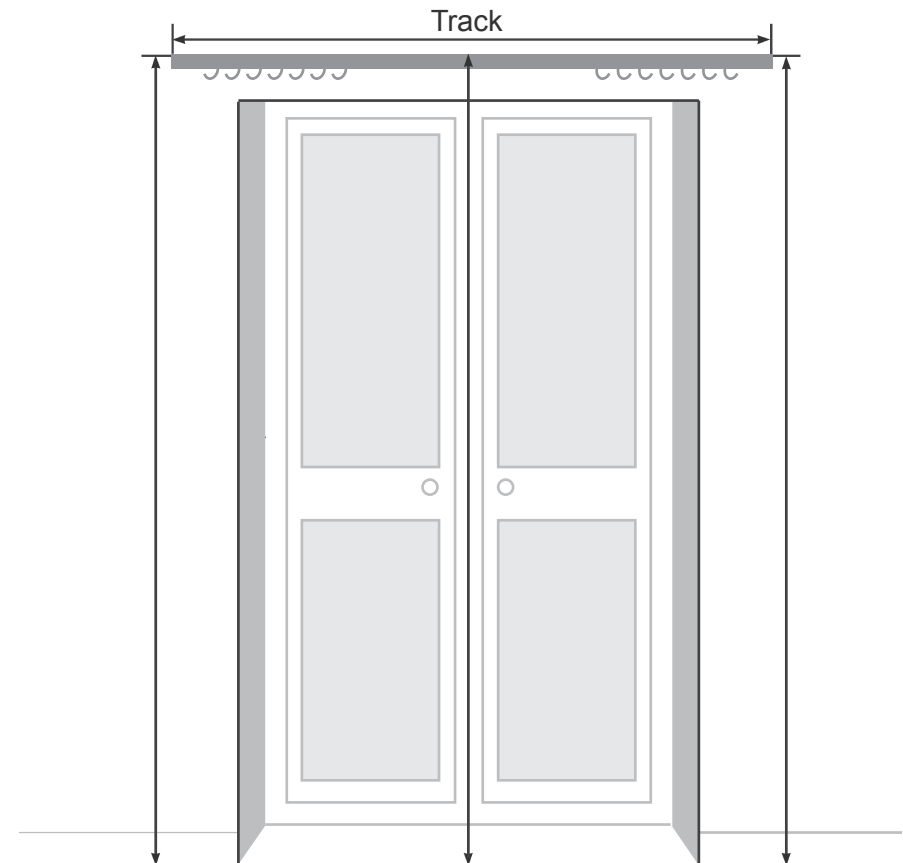

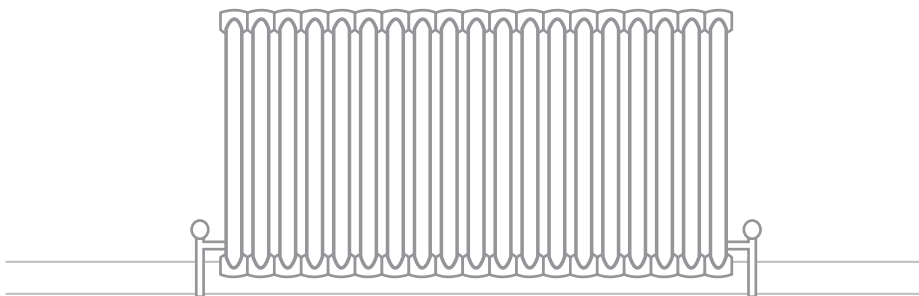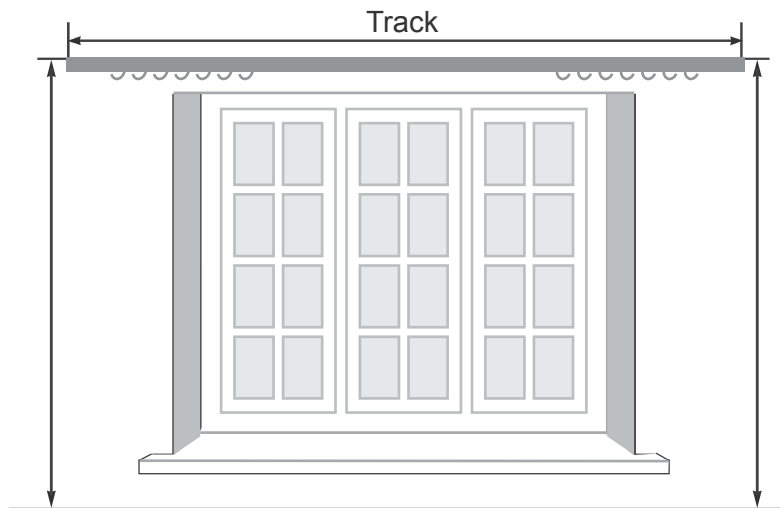

MEASURING SHORT LENGTH CURTAINS

04

Two measurements required.

For a pole in situ:

Step One: Measure length of pole excluding finials. Plus number of rings.

Step Two: Measure from the eye of the ring (where the curtain hook goes in) to where you would like the bottom of the curtain to be.

For a track in situ:

Step One: Measure the length of the track. Plus number of sliders.

Step Two: Measure from the top of the track to where you would like the bottom of the curtain to be.

As a rule of thumb short curtains are normally made to finish 6" (15cm) below the window sill.

If you have a radiator below the window please ring and I can advise you.



CUSTOM MADE CURTAINS & BLINDS



07702245333 or 01903 752204



kim@memyneedleandi.co.uk